

PLU_HJL111_175


Illmod 600 15 7-12.
Alternativ bagstop+fuge.
Alternative backer-rod+
mastic joint.

Fugeplacering hvis "alm."
Futura+ karm.
Sealing position if "ordinary"
Futura+ frame.

OBS
Alu-afdækningen skal monteres
samtidig med elementerne.
Install the alu-cover at the same
time as the elements.

Standard løsning:
Påføring og alu-afdækning er tilvalg.
Træ stolpe og øvrige montage
materialer leveres af montør.
149 mm karm - min. 100x100 mm.
175 mm karm - min. 100x100 mm.
Opklodsning, skrueafstande og
skrueplacering som standard montage.

Standard solution:
Packers and alu-flashing is optional.
**Timber post and other installation
materials by installer.**
149 mm frame - min. 100x100 mm.
175 mm frame - min. 100x100 mm.
Wedging, fixing points and fixing areas
as standard installation.

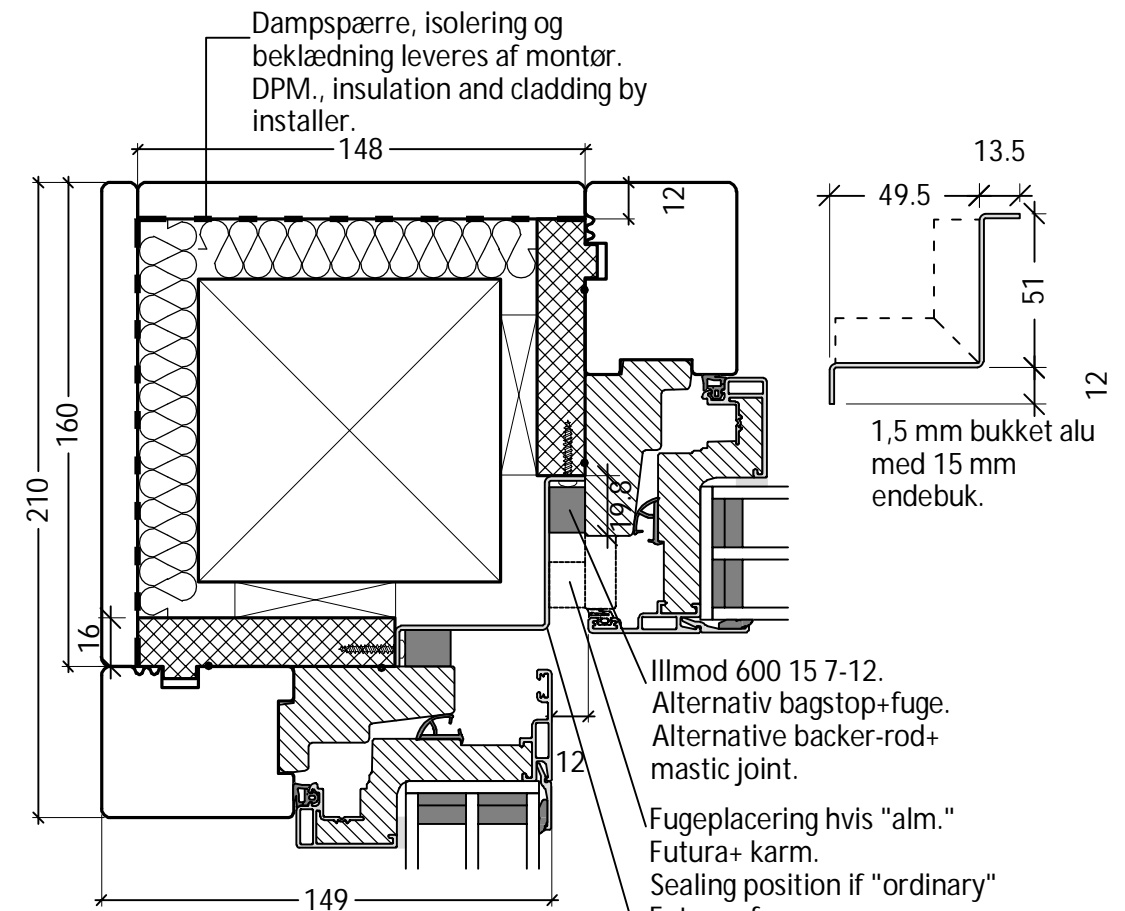

PLU_HJL111_149

Illmod 600 15 7-12.
Alternativ bagstop+fuge.
Alternative backer-rod+
mastic joint.

Fugeplacering hvis "alm."
Futura+ karm.
Sealing position if "ordinary"
Futura+ frame.

OBS
Alu-afdækningen skal monteres
samtidig med elementerne.
Install the alu-cover at the same
time as the elements.

DK	Standard hjørneløsning 90° 149/175 mm karm med indadgående hjørne - Skydedør	www.idealcombi.dk
UK	Standard corner solution 90° 149/175 mm frame with internal corner - Sliding door	www.idealcombi.com

TYPE Futura+ Rev. no. 02 Drawing no. PLU-HJL111

© Idealcombi A/S 2011. This material is the property of and copyright protected by IDEALCOMBI A/S.